


TICO® Pipe Grips Installation Guide


Product Code: RC1159

Rubber Lined Pipe Grips

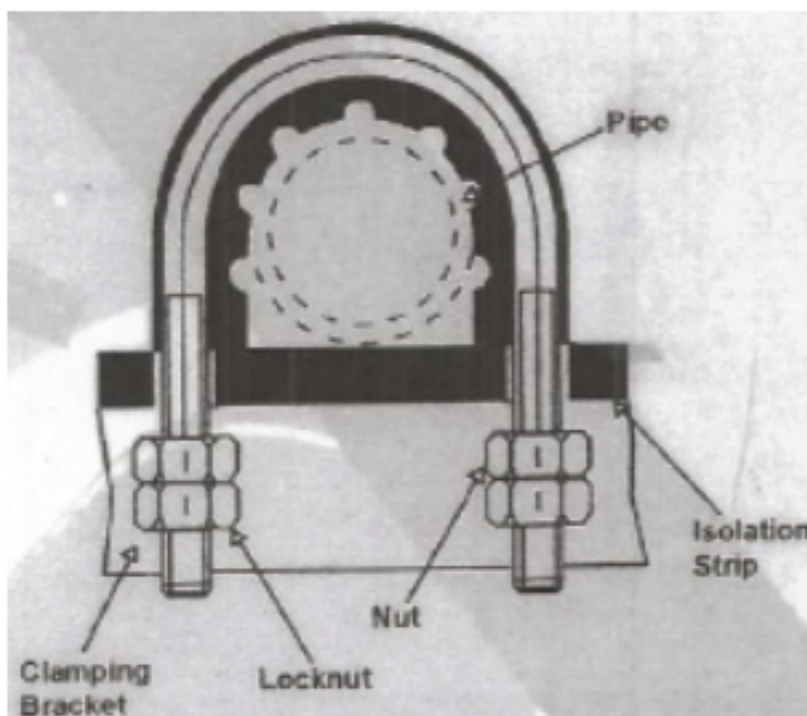

1. Ensure that the size of TICO® Pipe Grip matches the pipe.
2. Remove nuts and isolation strip.
3. Place 'U' bolt part of TICO® Pipe Grip on pipe. Refit isolation strip and fit through clamping bracket.
4. Refit nuts and finger tighten until TICO® Pipe Grip seats firmly and securely on pipe. Tighten nuts a further 1 or 2 turns with a spanner and lock with a Locknut.

PTFE Lined Pipe Grips

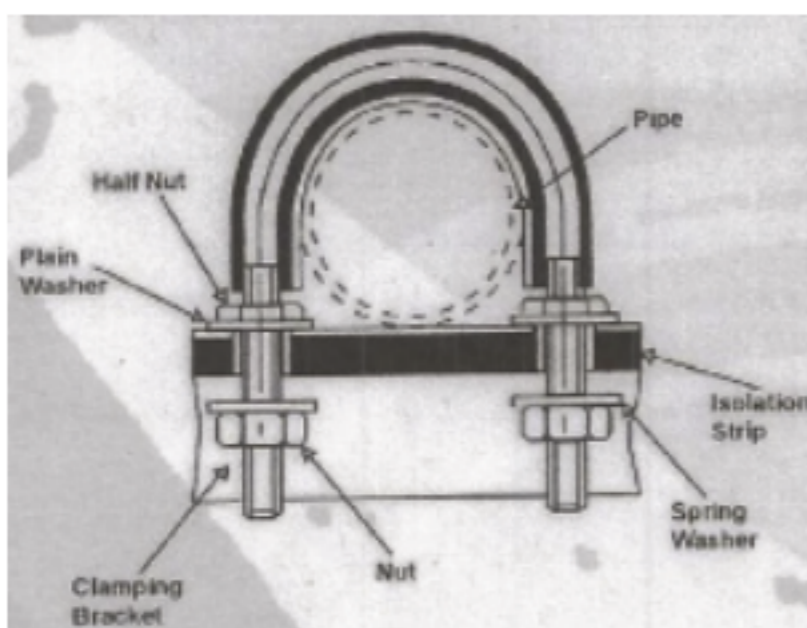

1. Ensure that the size of TICO® grip matches the pipe.
2. For sizes up to and including 1" nominal pipe size, fit as rubber lined type above.
3. Remove lower nuts, spring washers and isolation strip.
4. Place 'U' bolt part of TICO® Pipe Grip on pipe. Refit isolation strip and fit through clamping bracket.
5. Adjust half nuts such that a nominal clearance is maintained between the crest of the pipe and the PTFE lining.
6. Refit spring washers and bottom nuts and tighten with a spanner.

The information contained on this product information sheet is to be used as guidance. The advice is given in good faith and does not constitute any guarantee or recommendation for suitability. The Rubber Company cannot be held liable for any damage caused by incorrect installation. We hereby reserve the right to change the technical information herewith without notification or prior agreement.