



Manufacturers, Installers & Suppliers

RubbaPour Repair Kit


Instructions



Remove all loose material from damaged area



Mark area to be cut back

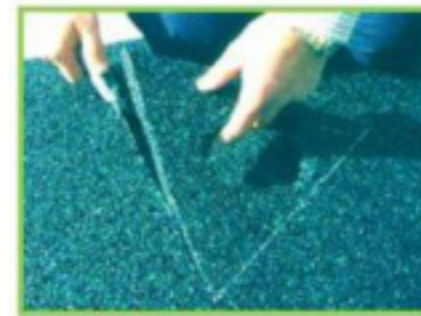

Cut back area neatly with knife to give a clean edge



Remove damaged area



Ensure all materials are close to hand



Apply some primer to all edges to act as a bonding agent



Mix the granules and polyurethane together in the bucket



Pour mixed granules into area



Overfill the hole to allow for compression



Screed and compress granules into area



Ensure granules are level and in line with existing surface



Leave area to cure